

RUGER® LCP® MAX

PARTS LIST

Design, prices and specifications subject to change without notice.
SPECIFY MODEL, CALIBER, AND SERIAL NO. WHEN ORDERING
 (See Exploded View on Page 41)

Key No.	Part Name
1	Grip Frame
2	Magazine Latch
3	Magazine Latch Spring
* 4	Slide
5	Rear Sight
6	Hammer
7	Hammer Pin
8	Hammer Spring
9	Hammer/Sear Pivot Pin, 2 Req'd
10	Hammer Spring Seat Pin
11	Hammer Spring Cap
12	Extractor
13	Firing Pin/Extractor Retaining Pin, 2 Req'd
14	Extractor Spring
15	Front Sight
16	Firing Pin
17	Firing Pin Spring
† 18	Frame Insert
19	Outer Trigger
20	Inner/Outer Trigger Pin
21	Inner Trigger
22	Inner Trigger Spring
23	Trigger Pivot Pin
24	Trigger Pivot

† The Frame Insert is a serial-numbered component and is defined as a “firearm” by Federal Law and is not sold as a separate component.

* PARTS SO MARKED MUST BE FACTORY FIT

Key No.	Part Name
25	Trigger Spring
* 26	Trigger Bar
* 27	Sear
28	Sear Spring
29	Takedown Pin Detent
30	Slide Stop
31	Guide Rod
32	Inner Recoil Spring
33	Outer Recoil Spring
* 34	Barrel
35	Takedown Pin
36	Front Frame Pin
37	Magazine Assembly, 12-rd
38	Magazine Assembly, 10-rd
39	Pinky Extension Floorplate

* PARTS SO MARKED MUST BE FACTORY FIT

RUGER® LCP® MAX

EXPLODED VIEW

