

Step 1. Remove Slide

Ensure that your firearm is UNLOADED and remove the slide from the grip assembly.

Components Included:



- Sig Sauer P365 Titanium Performance Striker
- 3 lb Striker Spring

Page 1




You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.


(P.) (727)223-1816 (E.) Help@Mcarbo.com

Step 2. Remove Striker Assembly

The striker sleeve is used to retain the slide cap. To remove the striker assembly, lightly press the striker tab inward, toward the center of the slide and down, toward the barrel.

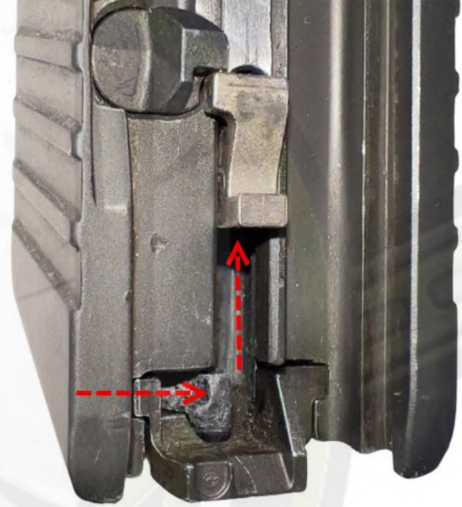

Page 2

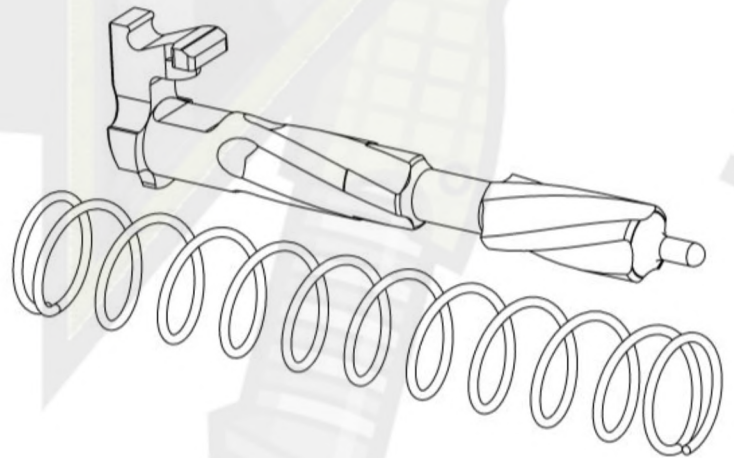

Sig Sauer P365
Titanium Performance Striker
Installation Instructions

Step 3: Remove Slide Cap

Once you remove the tension applied to the slide cap by the striker sleeve, you will be able to push the slide cap down and off of the back of the slide.



Step 4: Remove Striker Assembly

Now that the slide cap is removed, you can remove the striker assembly by pushing it out of the rear of the slide.



Page 3

Step 6: Assembling The Titanium Performance Striker

Notice:

- A.) You will reuse the following OEM parts: Spring Cups, Striker Sleeve and Striker Return Spring.
- B.) Models made after mid 2021 no longer use a striker return spring.

1. Slide the OEM striker return spring over the tip of the Titanium Performance striker.
2. Insert the Titanium Performance Striker into the OEM striker sleeve.
3. Place the **MCARBO 3 lb Striker Spring** over the top of the Titanium Performance Striker
4. Position the Titanium Performance Striker lug on a hard, flat surface. Then compress the 3lb striker spring toward the striker sleeve leaving enough clearance to insert the spring cups.

When installing the spring cups make sure that they are placed inside of the recess on the Titanium Performance Striker as pictured in Fig. A.



Page 5

Step 5: OEM Striker Disassembly

1. Position the striker lug on a hard, flat surface.
2. Grip the striker spring with your fingers underneath the spring retaining cups.
3. Compress the striker spring down toward the striker sleeve. This will release the tension that the striker spring is putting on the springs cups.
4. Once the spring is compressed, remove the spring cups.




Page 4

Step 7: Installing Titanium Performance Striker


1. While pressing down the (A.) striker safety in the slide, insert the (B.) Titanium Performance Striker assembly into the rear of the slide.



2. Once the striker is retained in the slide by the striker safety, you can press the striker sleeve in flush with the rear of the slide, using a punch to hold it in place.

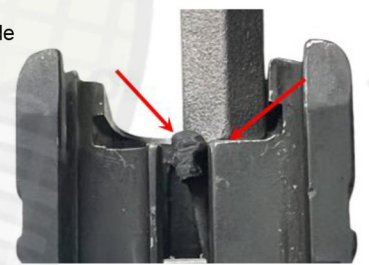

3. With the striker assembly compressed, insert the slide cap into the channel in the slide. Push the slide cap firmly to ensure it is fully captured by the striker assembly and properly seated in the slide.

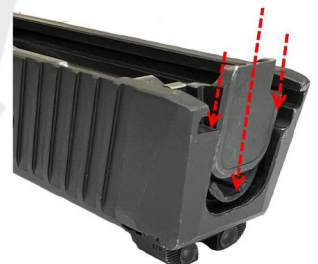

Page 6