


Download or Print Instructions | Contact: help@mcarbo.com | Page 1



Step 1: Clear your Firearm - Check the Chamber, Bolt Face and Magazine Well.





Step 2: Gather Parts and Tools needed for Installation.



Step 4: Separate the Upper from the Lower. Set the Upper to the Side.



- MCARBO AR-15 Trigger Spring Kit
- 2. Hammer
- 3. 1/8" Punch
- Two Blocks of Wood (or Bench Block)
- Eye Protection





Download or Print Instructions | Contact: help@mcarbo.com | Page 2



Step 5: Release the Hammer on the Lower.




Step 6: Tap out the Hammer Hinge Pin. Keep your Punch Inserted.





Step 7: Hold you thumb down over the Hammer and Hammer Spring. Remove the Punch and gently Pull Out the Hammer.

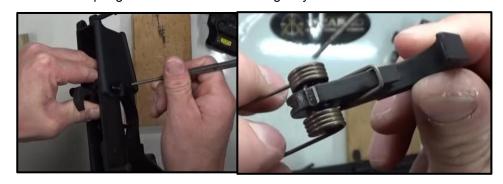

Step 8: Remove the Factory Hammer Spring from the Hammer.





Download or Print Instructions | Contact: help@mcarbo.com | Page 3



Step 9: Install the New MCARBO Hammer Spring onto the Hammer in the same Orientation.



Step 10: Begin to Insert the Hammer back into the Lower.





Step 11: Line up the Holes of the Spring and Reinstall the Hammer Hinge Pin. Make sure the Pin is even on both sides.





Step 12: Drop your Hammer.





Download or Print Instructions | Contact: help@mcarbo.com | Page 4



Step 13: Reattach the Upper and Push in the Takedown Pins.







Step 14: Perform a Function Check. Test the Safety and Trigger Reset.

