



M*CARBO Tikka T3 Trigger Spring Kit

Download or Print Instructions | Contact: help@mcargo.com | Page 1



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 1: Clear your Firearm - Check the chamber, bolt face and magazine well.

Step 2: Gather Parts and Tools Needed




1. Tikka T3 Trigger Spring Kit
2. 2.5mm Allen key
3. 5mm Allen Key
4. T25 torx key Six point star bit
5. Eye Protection

Step 3: Press bolt release. Remove bolt. Set aside. Turn up right.



Step 4: Using the T25 Torx key with a six point star bit, remove the two stock screws.

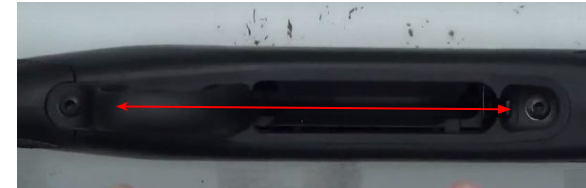

Step 5: Separate stock from barrel and receiver group. Set stock aside.





M*CARBO Tikka T3 Trigger Spring Kit


Download or Print Instructions | Contact: help@mcarbo.com | Page 2



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 6: Turn up right. Focus on Trigger Assembly.

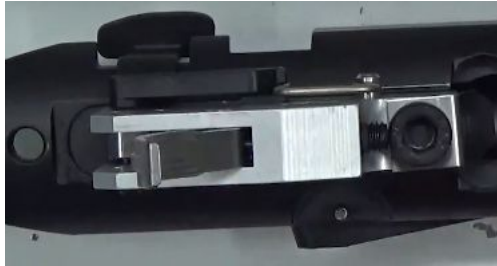

Step 7: Take 2.5mm Allen Key, tighten up set screw on Trigger Return Spring to provide enough clearance for trigger assembly bolt.



Step 8: Take 5mm Allen Key to remove Trigger Assembly Bolt. Remove bolt and flat spring. Set aside.



Step 9: Separate Trigger Assembly from the receiver. Set aside.



Step 10: Take 2.5mm Allen Key to remove set screw. Set aside. Take out plunger and spring.





M*CARBO Tikka T3 Trigger Spring Kit

Download or Print Instructions | Contact: help@mcarbo.com | Page 3



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 11: Insert M*CARBO spring onto the short side of the plunger.



Step 12: Reinsert plunger and M*CARBO spring into Trigger Assembly.



Step 13: Hand thread set screw into the bare aluminum. It's important to be very careful. If you get those threads cross threaded it will shear every bit of the internal threads.



Step 14: Reinstall the trigger assembly back into the receiver. Line up the cutout for the safety lever. Insert the trigger assembly, make sure the holes are lined up.





M*CARBO Tikka T3 Trigger Spring Kit


Download or Print Instructions | Contact: help@mcarbo.com | Page 4




You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 15: Take the 2.5mm and tighten the set screw to make sure the Trigger Assembly Bolt has enough room.

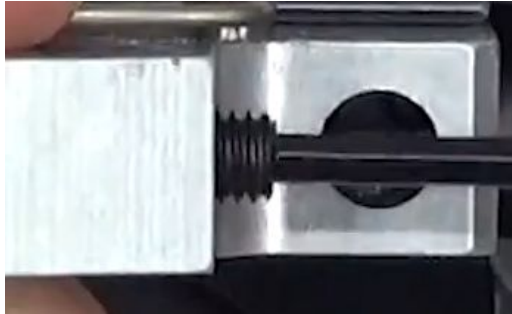


Step 17: Take the 2.5mm and untighten the set screw until it hits the head of the Assembly Bolt.

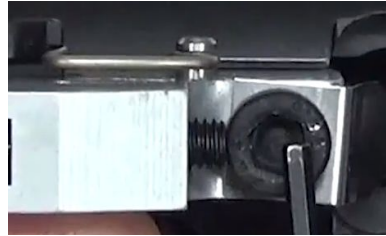

Step 19: Take the shortest screw for the front, and the longest screw for the rear.


Take the T25 Torx key and tighten them up.

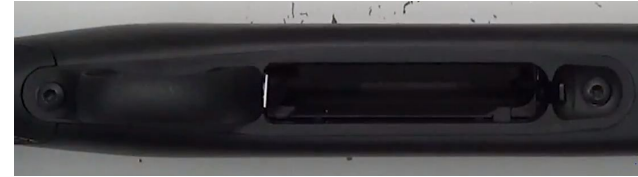

Step 18: Reassemble. Drop the stock over the Trigger Assembly lining up the holes on the stock put the holes on the actual receiver.



Step 16: Reinsert with the 5mm Allen Key, the Assembly Bolt with the flat spring.

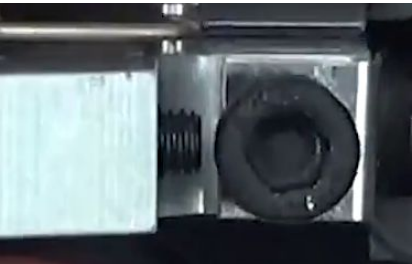

Step 20: Reinsert the bolt, line up the lugs, insert the bolt.





M*CARBO Tikka T3 Trigger Spring Kit

Download or Print Instructions | Contact: help@mcarbo.com | Page 5



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 13: The last step is a function test. To make sure your rifle is in good working order. Place weapon on safe, pull the trigger. Then place on fire and feel the difference.

HAPPY SHOOTING!



Before M*CARBO

After M*CARBO