



Mossberg 702 Plinkster Trigger Spring Kit Installation Instructions from www.MCARBO.com



1. Tap out this pin (tap on the smooth end if you can tell which side it is).

2. Uncock the hammer and tap out this pin (tap on the smooth end if you can tell which side it is).



3. Tap this one out, the trigger, sear, and spring will come out

6. Replace the sear spring with the MCARBO Sear Spring.



**** Notice **** Make sure that the hooked end is installed near the trigger and rests under the trigger hinge.



4. Remove hammer, spring and strut. The hinge pin is normally trapped between the sides of the housing. It will just fall out when removed.

5. Remove the trigger and its wing piece






7. Drop the sear in so the end of the spring rests on the bottom of the housing like a ski. The right hole will have to line up with the trigger hinge pin hole. The spring has to be compressed to get it to line up. Then insert the pin. **Note: If the spring rotates so the end is facing forward, it won't work.

** It helps to hold the sear/spring as shown, when inserting it into the trigger housing. Keep your thumb on the simple bent end.



** Once you have inserted the sear bar into the trigger housing you see the sear bar should rock when you pull the trigger. If it doesn't, the spring has rotated out of place.

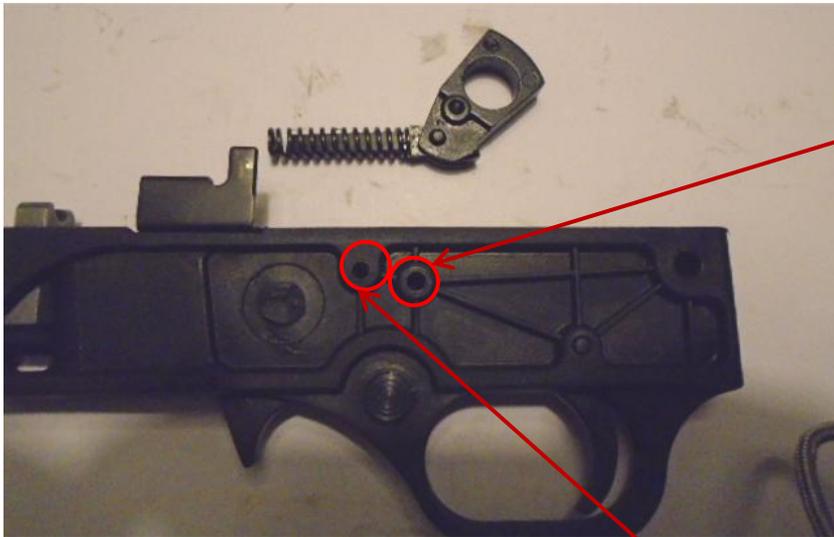

8. There is a pocket for the hammer spring to fall into, the line up and push in the hammer hinge pin. Insert the pin once the holes are lined up correctly.

10. Re-insert Trigger assembly into receiver and mount back into the stock. Then do a function check when finished.

9. Insert the last pin here. It goes through nothing. It's just a place holder.